



**TANGO
Device
Server**

TANGO Device Server User's Guide

HqpsBinIn Class

**Revision: tata - Author: goudard
Implemented in Python**

Introduction:

This class is part of the HQPS project. Its aim is to report the Wago PLC binary inputs. Each device has only a state which reflects the binary input value (OPEN/CLOSE). A device can also be in FAULT if the PLC software is not running

Class Inheritance:

- PyTango.Device_4Impl
 - HqpsBinIn

Properties:

Class Properties		
Property name	Property type	Description
ModbusDevName	Tango::DEV_STRING	Wago PLC Modbus device name

Device Properties		
Property name	Property type	Description
ModbusDevName	Tango::DEV_STRING	Wago PLC Modbus device name
Address	Tango::DEV_LONG	Address in PLC
BitNumber	Tango::DEV_LONG	Bit number in PLC data

Class Properties Default Values:

Property Name	Default Values
ModbusDevName	No default value

Device Properties Default Values:

Property Name	Default Values
ModbusDevName	No default value
Address	0
BitNumber	-1

States:

States	
Names	Descriptions
OPEN	
CLOSE	
FAULT	The PLC software is not running or there is a problem with the 5 V DC

Commands:

More Details on commands....

Device Commands for Operator Level		
Command name	Argument In	Argument Out
Init	DEV_VOID	DEV_VOID
State	DEV_VOID	DEV_STATE
Status	DEV_VOID	CONST_DEV_STRING

1 - Init

- **Description:** This commands re-initialise a device keeping the same network connection. After an Init command executed on a device, it is not necessary for client to re-connect to the device. This command first calls the device *delete_device()* method and then execute its *init_device()* method. For C++ device server, all the memory allocated in the *nit_device()* method must be freed in the *delete_device()* method. The language device desctructor automatically calls the *delete_device()* method.
- **Argin:**
DEV_VOID : none.
- **Argout:**
DEV_VOID : none.
- **Command allowed for:**
 - Tango::OPEN
 - Tango::CLOSE
 - Tango::FAULT

2 - State

- **Description:** This command gets the device state (stored in its *device_state* data member) and returns it to the caller.
- **Argin:**
DEV_VOID : none.
- **Argout:**
DEV_STATE : State Code
- **Command allowed for:**
 - Tango::OPEN

- Tango::CLOSE
- Tango::FAULT

3 - Status

- **Description:** This command gets the device status (stored in its *device_status* data member) and returns it to the caller.

- **Argin:**
DEV_VOID : none.

- **Argout:**
CONST_DEV_STRING : Status description

- **Command allowed for:**
 - Tango::OPEN
 - Tango::CLOSE
 - Tango::FAULT

TANGO is an open source project hosted by :
SOURCEFORGE.NET®

Core and Tools : CVS repository on tango-cs project
Device Servers : CVS repository on tango-ds project