



TANGO
Device
Server

HLS concentrator device server. User's Guide

HlsConcentrator Class

Revision: - Author: peru
Implemented in C++ - CVS repository: ESRF

Introduction:

This device is intended to collect and format the individual HLS captor values.

Class Inheritance:

- Tango::Device_4Impl
 - HlsConcentrator

Class Description:

This device is intended to collect and format the individual HLS captor values.

Properties:

Device Properties		
Property name	Property type	Description
CaptorDevNameList	Array of string	An array of strings containing the device names for all of the captor to be collected.

Device Properties Default Values:

Property Name	Default Values
CaptorDevNameList	No default value

There is no Class properties.

States:

States	
Names	Descriptions
ON	State reached when all of the captor devices have been imported.
ALARM	State reached when not all of the captor devices have been imported.

Attributes:

Spectrum Attributes			
Attribute name	Data Type	X Data Length	Expert
Levels	DEV_DOUBLE	400	No
Temperatures	DEV_DOUBLE	400	No
CaptorDevNames	DEV_STRING	400	No

Commands:

More Details on commands....

Device Commands for Operator Level		
Command name	Argument In	Argument Out
Init	DEV_VOID	DEV_VOID
State	DEV_VOID	DEV_STATE
Status	DEV_VOID	CONST_DEV_STRING

1 - Init

- **Description:** This commands re-initialise a device keeping the same network connection. After an Init command executed on a device, it is not necessary for client to re-connect to the device. This command first calls the device *delete_device()* method and then execute its *init_device()* method. For C++ device server, all the memory allocated in the *nit_device()* method must be freed in the *delete_device()* method. The language device desctructor automatically calls the *delete_device()* method.
- **Argin:**
DEV_VOID : none.
- **Argout:**
DEV_VOID : none.
- **Command allowed for:**
 - Tango::ON
 - Tango::ALARM

2 - State

- **Description:** This command gets the device state (stored in its *device_state* data member) and returns it to the caller.
- **Argin:**
DEV_VOID : none.
- **Argout:**
DEV_STATE : State Code
- **Command allowed for:**
 - Tango::ON
 - Tango::ALARM

3 - Status

- **Description:** This command gets the device status (stored in its *device_status* data member) and returns it to the caller.
- **Argin:**
DEV_VOID : none.
- **Argout:**
CONST_DEV_STRING : Status description
- **Command allowed for:**
 - Tango::ON
 - Tango::ALARM

<p>TANGO is an open source project hosted by :</p> 	<p>Core and Tools : CVS repository on tango-cs project Device Servers : CVS repository on tango-ds project</p>
--	--